

扫描的时候把串口转 usb 线拔掉, 扫完设置码再插上(没有使用串口转 usb 线可以忽略)

1. 扫描



**Set Factory Defaults**

2.



**\*Standard RS-232**

3.



**Disable ACK/NAK**  
(0)

4.



**Host**  
(8)

5.




**SSI Host**

6.




**Host: RTS High**  
**(1)**

7.

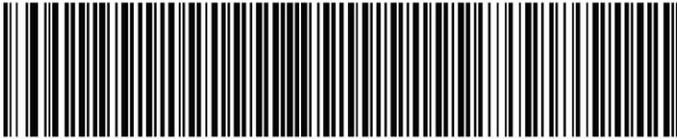

**Add Enter Key (Carriage Return/Line Feed)**

8.

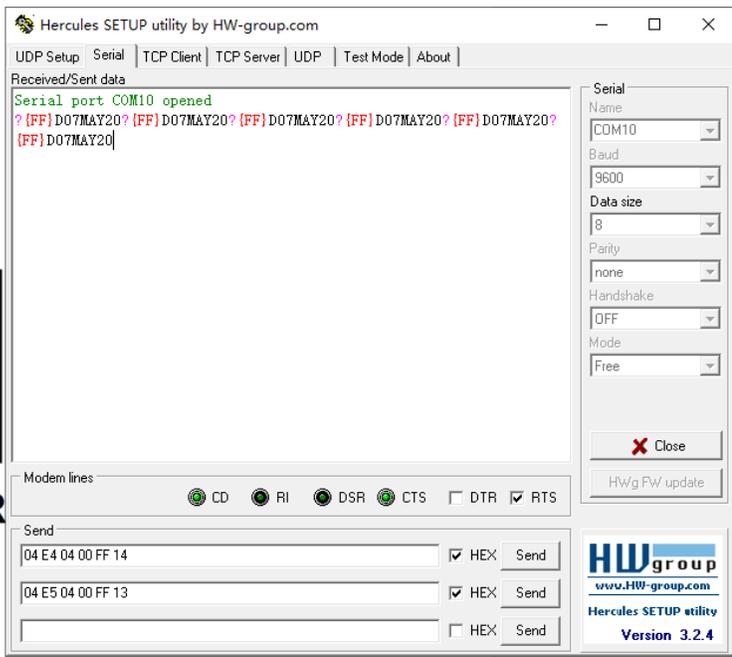

触 发指令为: 04 E4 04 00 FF 14  
结束触发指令为: 04 E5 04 00 FF 13